



DB Customz 2014-2020 Tundra Installation Instructions:



Here are the steps for how to install a 2014-2020 Tundra DB Customz Grille Insert:




Step 1: Remove the two plastic clips on top of the radiator and the four 10mm screws on the radiator support. At this point the whole grille assembly will be removed from the truck.



Step 2: Separate the outer shell, and the factory center of the grille.



Step 3: Install the 3 supply brackets as shown above:

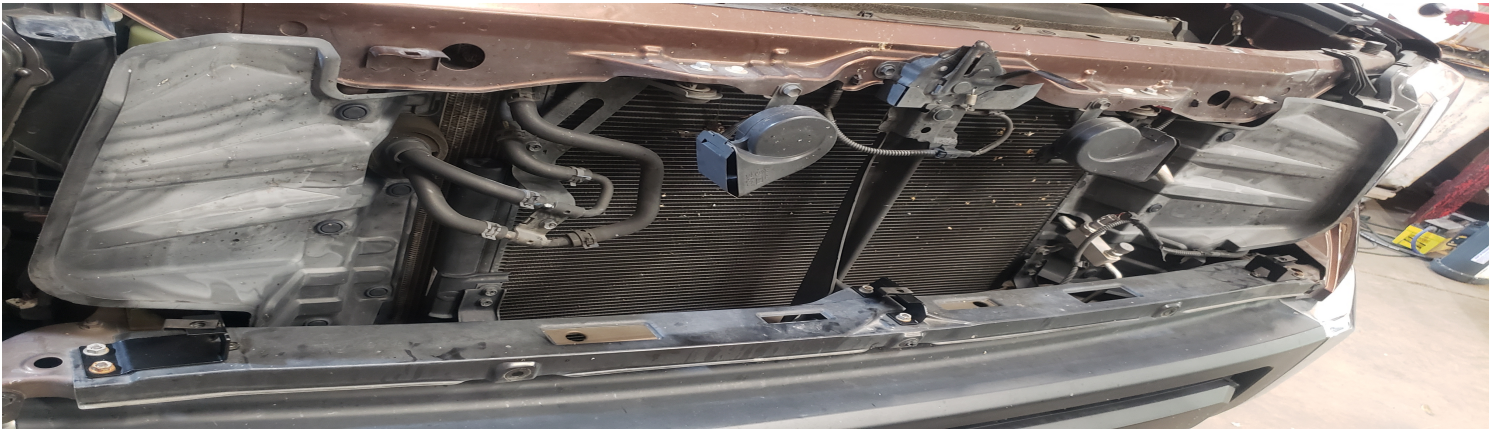

At this point then you can install the grille on those three brackets. Reach through the top holes and secure the three bolts through the grill onto those three brackets, as shown.



Step 4: Secure the two L tabs onto the outer shell as shown above.

Step 5: Reinstall the outer shell assembly and secure the two side “L” tabs. At this point, you can tighten the three bolts on the bottom.

Step 6: (This is for 2018-2020 Tundra's with the TSS Sensor). All you need to do is remount the sensor on the two studs.



Step 7: (This is for Tundra's with the LED Glow Option). Our grille is supplied with a posi tap to tap into your marker light on the driver's side. The purple wire is located next to the battery in a plastic casing. The ground wire with the eyelet can be grounded anywhere.